

# Installation

Camcode Warehouse Floor Labels

## Tools required to install

- Power drill
- Components supplied by Camcode: label, frame, 4 screws, 5/32" drill bit and Phillips-head bit.

### Step 1

**Safety first - Wear chemical resistant gloves.**

Clean floor where label is to be placed with isopropyl alcohol or other solvent cleaner available. For extremely dirty floors, consider using a Scotch Brite pad with degreaser.

### Step 2

**Safety first - Wear safety glasses.**

Position label frame on floor. Step down on one side of the frame to hold it in place. On the opposite side, drill only one hole 1.5" deep with the drill bit provided in the Camcode Warehouse Floor Label Kit.

*Tip - Mark the drill bit at 1.5" with black electrical tape to aid in establishing in drill depth.*



### Step 3

Replace drill bit with the Phillips-head bit provided. Insert and tighten one of the concrete screws in the hole to hold the frame in place.



### Step 4

Replace Phillips-head bit with the drill bit and drill the three remaining holes. Re-insert the Phillips-head bit, insert and tighten the three remaining concrete screws in those holes.

### Step 5

Peel off back liner of the floor label exposing the pressure sensitive adhesive on the back of the label. Be careful not to touch the adhesive side of the label.



Make sure the area inside the frame is clean and free of debris. Place the label in the frame by positioning one edge of the label against the inside edge of the frame and then pressing the rest of the label firmly in place to insure a good bond.



*Tip - After time, dirt may accumulate on the surface of the label. Clean the surface with isopropyl alcohol and it will look like new!*

## Replacing

Camcode Warehouse Floor Labels

## Tools required to change label

- Flat-head screw driver

### Step 1

Place flat-head screw driver in the corner under the label. Next, work the tip of the screw driver under the edge of the label and pry up until the label dislodges.




### Step 2

To install a replacement label, follow step 5 of the installation instructions.

# Mounting Recommendations

## Camcode Warehouse Floor Labels

- Optimal location is in between open bays.
- Close to bay entrance.
- Allows operator to easily scan Floor Label as they enter/exit the bay.
- Keeps labels away from main traffic in the aisles.

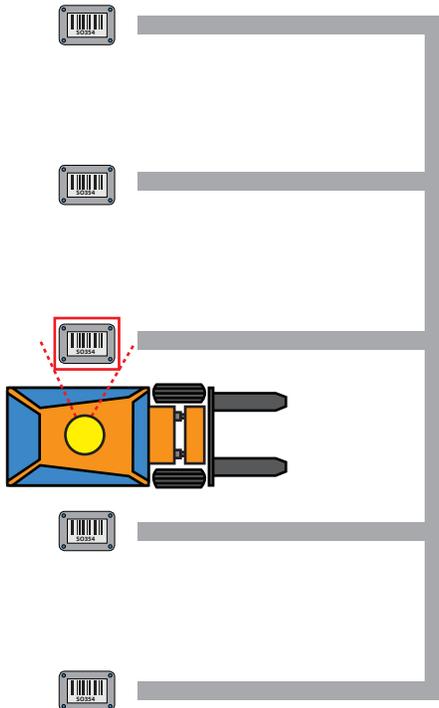

Aluminum label with frame after six months of extensive lift truck and pallet traffic.



## Warehouse Floor Labels by

# CAMCODE®

18531 South Miles Road  
Cleveland, Ohio 44128  
USA

phone (800) 627.3917

fax (216) 587.4719

email [customer\\_service@camcode.com](mailto:customer_service@camcode.com)

[www.camcode.com](http://www.camcode.com)

# CAMCODE®

## Warehouse Floor Label Mounting Instructions

